



## INSTALLATION / OPERATION / MAINTENANCE INSTRUCTIONS

---

### LEVELSURE GAUGE

(Combined Magnetic Level Gauge with Independent Electronic Level Sensor)

---

PLEASE RETAIN FOR FUTURE USE

**TC FLUID CONTROL**  
A division of the WIKA group  
Unit 4, The Interchange  
Wested Lane, Swanley, Kent BR8 8TE  
Tel: +44 (0) 1322 622400  
Fax: +44 (0) 1322 660621  
Website: [www.tc-fluidcontrol.com](http://www.tc-fluidcontrol.com)

**CE**  
Revision E

---

## CONTENTS

---

<b>1</b>	<b>Symbols Used.</b>
<b>2</b>	<b>General description.</b>
<b>3</b>	<b>Principle of Operation.</b>
<b>4</b>	<b>PED approval.</b>
<b>5</b>	<b>Commissioning</b>
<b>6</b>	<b>Installation of the Gauge</b>
<b>7</b>	<b>Installation of the Level sensor</b>
<b>8</b>	<b>Installation of Float</b>
<b>9</b>	<b>Bolt Torque.</b>
<b>10</b>	<b>Functional Testing of the Gauge.</b>
<b>11</b>	<b>Bringing into Service.</b>
<b>12</b>	<b>Maintenance.</b>
<b>13</b>	<b>Removal of the Gauge.</b>
<b>14</b>	<b>Removal of the Float.</b>
<b>15</b>	<b>Service Life.</b>
<b>16</b>	<b>High / Low temperature Service.</b>
<b>17</b>	<b>Spares</b>
<b>18</b>	<b>Gauge- ATEX applications</b>
<b>19</b>	<b>ATEX Certification.</b>
<b>20</b>	<b>Temperature Class.</b>
<b>21</b>	<b>ATEX applications. Conditions for Safe Use.</b>
<b>22</b>	<b>Ancillaries.</b>
<b>23</b>	<b>Earth Bonding.</b>
<b>24</b>	<b>Openings.</b>
<b>25</b>	<b>Cam Lock Fittings.</b>
<b>26</b>	<b>ATEX applications. Coatings.</b>
<b>27</b>	<b>Trouble Shooting Guide.</b>
<b>28/29</b>	<b>ATEX Data Sheet</b>

## 1: Symbols Used

The following symbols are used in these operating instructions:



**Warning:** If ignored injury or damage to property can occur.

**Danger:** If ignored serious injury or damage to property can occur.

**Caution:** Failing to comply with these instructions can lead to malfunction of or damage to the Magnetic Level Gauge.



### Ex Applications

Instructions which must be complied with when the unit is used in potentially explosive environments and to meet the requirements of the EC type examination certificate.



### Information

Facts and information concerning proper operation of the Magnetic Level Gauge



### Instructions for electrical installation

Information on proper electrical installation.



### Safety information

Read these instructions before installation and putting into operation.

Installation commissioning and maintenance should only be carried out by suitably qualified personnel in conjunction with these instructions.

Comply with the relevant safety regulations when using the equipment.

The LevelSure gauge must not be modified as this will invalidate the warranty and or the product certification.

Measures must be taken to prevent risks to persons and property in the event of a defect.

Do not operate the LevelSure Gauge in the immediate vicinity of strong electromagnetic fields (minimum distance: 1 m) as this may give rise to incorrect readings.

Comply with the maximum current and voltage ratings as stated in the technical data section.

# TC Fluid Control - LevelSure Gauge

Under the requirements of the Pressure Equipment Directive (PED 97/23/EC), the LevelSure Gauge can not be classified as a pressure safety device. This equipment can only be used for liquid fluid measurement.


## 2: General description

The TC Fluid Control LevelSure gauge is designed to give an uninterrupted and immediate level indication of most liquids including steam condensate and arduous chemicals. An integral electronic level transmitter is normally factory fitted - other options can be retrofitted including additional sensors and various switches with the appropriate approvals.

## 3: Principle of Operation

The LevelSure gauge is designed so that the liquid being measured is enclosed within a sealed chamber. A float fitted with a permanent omni-directional magnet moves freely inside the chamber and actuates the magnetic wafer within the indicator which is fixed on the outside of the chamber body. As the float raises or falls with the liquid level, each wafer rotates 180° and so presents a contrasting colour. The wafers above the liquid level will show white, whereas the wafers below will show red. The indicator then presents a clearly defined liquid level within the chamber. The wafers can resist accidental disturbance such as vibration due to their edge magnetisation and mutual attraction. Other colours are available for specific applications. The electronic level sensor can be 'Guided Wave Radar', tuning fork or capacitance technology which can include various outputs,

Approvals and SIL ratings – please refer to transmitter documentation for details.

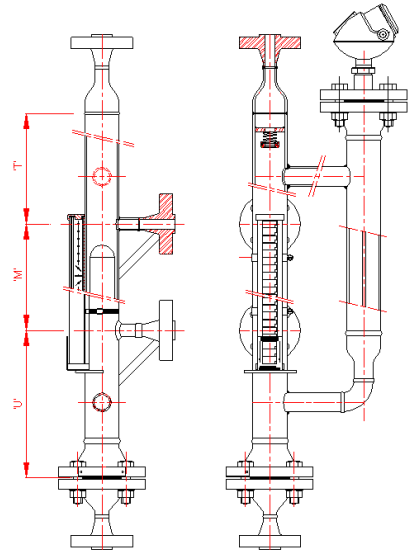

## 4: PED Approval – EC Certificate of conformity

TC Fluid Control Gauges are manufactured in accordance to the requirements as specified in the Pressure Equipment Directive 97/23/EC (Modules B+D) and where applicable to ATEX mechanical Directive 94/9/EC. Design codes used are in accordance to ASME B31.3 under Lloyds Register (Notified Body Number 0038) or AD2000 code under TÜV (Notified Body Number 0036). Refer to Declaration of Conformity supplied for details.



### WARNINGS:

1. The maximum operating conditions are specified on the tag plate of both the chamber and electronic transmitter; these must not be exceeded. Exceeding these limits may lead to a failure of the instrument integrity and possible harm to persons/property.
2. The material selection of the instrument must be suitable/ resistant for the media and environmental conditions.
3. Ensure Level sensor is rated accordingly to the maximum design conditions
4. Design parameters allow the instrument to operate at elevated temperatures. Measures should be in place to avoid contact with hot equipment.
5. It is the client's responsibility to fit an appropriate pressure relief safety device within the system being monitored.
6. It is the client's responsibility to take appropriate measures to ensure no risk of over pressurisation of the instrument in the event of an external fire.
7. The instrument must not be modified, as this will invalidate the certification.
8. Ensure vent and drain plugs/fittings are sealed prior to service. Check for tightness.
9. Any work carried out on this equipment must be covered by a 'permit to work' procedure.
10. It is recommended that the instrument should be inspected on an annual basis. Inspect for corrosion, wear and correct transmitter output both internally and externally.
11. Earth bond appropriate equipment / ancillaries to comply with ATEX requirements (includes mechanical parts)
12. Remove the float when pressure testing the gauge or complete system.
13. Ensure the instrument is protected from impact, any external loadings or vibration.
14. Ensure correct gaskets/seals are fitted and are compatible with the media and process conditions. Ensure the correct torque is applied to the appropriate bolting.
15. This equipment must not be used as a support for other equipment or personnel.
16. Where chamber supports are provided, ensure these are fixed accordingly.
17. It is the client's responsibility to ensure that the instrument is fitted to a vessel of a similar linear expansion rate. High differentials can cause additional stress exerted onto the nozzle connections. Consult TC Fluid Control Sales for alternative options.
18. Where there is a hazard or danger present, warning signs should be displayed according to the local and national standards. Any isolation device fitted must comply with these standards.
19. The operators must wear protective clothes / equipment (PPE) according to local circumstances, regulations or site requirements.

### Notes:

Disposal or return of this equipment should be in accordance to regional / national guidelines or directives. Ensure that there is no residue remaining within the gauge that could cause possible harm.



## 5: Commissioning

1. Installation and commissioning of the LevelSure gauge should only be carried out by qualified and experienced engineering personnel.
2. All cabling and electrical connections must be carried out in accordance with the regulations and standards applicable in the country where the equipment is installed and by qualified personnel.
3. It is recommended that isolation valves should be fitted between the instrument and the vessel. The selection of the gasket joints and fittings (bolting) to have the required corrosion resistance and rated accordingly



## 6: Installation of the gauge.

Before mounting the gauge into position, the following points should be taken into account.

1. Vessel connections on the vessel/tank must be vertically in line.
2. It is not recommended that connections are taken from inlet or discharge lines as excessive surging may occur within the gauge.
3. Centre to centre dimensions between vessel connections on the tank and gauge must be within 1.5 mm of each other.
4. Ensure connecting pipe work is adequately supported to reduce additional stress due to gauge weight. Fit the gauge to the vessel/tank using the appropriate rated fixtures and gaskets. Ensure that the gasket material is resistant to the media, temperature and its vapour. Make sure that the vessel flange bolting is tightened to the required torque value. Optional extras such as additional transmitter and switches are normally factory fitted onto the chamber. Switches can be adjusted accordingly.
5. Check the separate I.O.M. of the integral level transmitter for installation procedure.



## 7: Installation of Level Sensor (if not factory fitted)


Refer to the Level sensor IOM for detailed assembly procedure:

General procedure is as follows;

1. Place a gasket on top of the instrument chamber flange.
2. Lower the sensor with flange/adaptor into the chamber.
3. Tighten the bolts as per bolt torque procedure (see Section 9) / screw unit in.
4. Connect housing unit as specified in respective IOM.

Ensure that any sensor probes do not come into contact with the inner wall of the instrument chamber. Ensure centralizing discs (where applicable) are fitted to aid centralisation. Also check that the probe does not touch the bottom of the instrument chamber (where applicable).

It is recommended that the setting up procedure is carried out prior to installation onto the vessel. Refer to the respective manual for the procedure. If required, a functional test also can be performed when fitted onto the vessel. See section 8

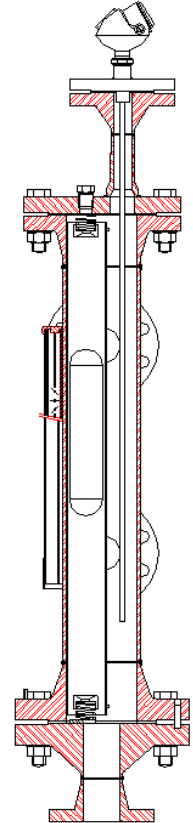

## 8: Installation of float.

Unpack the float from its protective case and proceed as follows:

It may be necessary to align the indicator wafers to represent their white face; this can be achieved by running a magnet along the length of the indicator unit. If a float failure warning indication is fitted, the bottom three wafers will show red. (Refer to the appropriate IOM sheets with regards to the setting up procedure required for the switches).

1. Remove the bottom flange from the chamber
2. Check that the float fits freely into the chamber. If centralising wires are fitted on the float, these can be pushed down to aid clearance. If there is insufficient clearance, consult TC Fluid Control.
3. Check that the specific gravity (S.G.) etched on the float is suitable for the media in question.
4. Clean the float of any adhering steel particles and install the float with the cap marked "TOP" uppermost in the chamber.
5. Replace the bottom flange and gasket. Bolt flange accordingly to the required torque value.



## 9: Bolt Torque

Nominal Chamber size	Gasket Type	Bolt Material Grade	ANSI 150	ANSI 300	ANSI 600	ANSI 900	ANSI 1500	ANSI 2500
2"	Reinforced graphite laminate. PSM	ASTM A193 B8 Cl.1 ASTM A194 Gr. 8 Un-lubricated - Maximum	5/8" UNC 76 Nm 57 ft-lb	5/8" UNC 76 Nm 57 ft-lb	-	-	-	-
2"	Reinforced Graphite laminate. PSM	ASTM A193 B8 Cl.2 ASTM A194 Gr. 8	5/8" UNC 101 Nm 75 ft-lb	5/8" UNC 101 Nm 75 ft-lb	5/8" UNC 101 Nm 75 ft-lb	-	-	-
2"	Spiral wound 316/graphite SWJ	ASTM A193 B8 Cl.2 ASTM A194 Gr. 8	5/8" UNC 101 Nm 75 ft-lb	5/8" UNC 101 Nm 75 ft-lb	5/8" UNC 114 Nm 84 ft-lb	7/8" UNC 284 Nm 210 ft-lb	7/8" UNC 355 Nm 262 ft-lb	1" UNC 581 Nm 429 ft-lb
2"	Stainless Steel RTJ	ASTM A193 B7 ASTM A194 2H (lubricated $\mu = 0.12$ )	5/8" UNC 101 Nm 75 ft-lb	5/8" UNC 101 Nm 75 ft-lb	5/8" UNC 114 Nm 84 ft-lb	7/8" UNC 284 Nm 210 ft-lb	7/8" UNC 355 Nm 262 ft-lb	1" UNC 581 Nm 429 ft-lb
2 1/2"	Reinforced graphite laminate. PSM	ASTM A193 B8 Cl.2 ASTM A194 Gr. 8	5/8" UNC 101 Nm 75 ft-lb	3/4" UNC 177 Nm 131 ft-lb	3/4" UNC 177 Nm 131 ft-lb	-	-	-
2 1/2"	Spiral wound 316/graphite SWJ	ASTM A193 B7 ASTM A194 2H (lubricated $\mu = 0.12$ )	5/8" UNC 114 Nm 84 ft-lb	3/4" UNC 177 Nm 131 ft-lb	3/4" UNC 177 Nm 131 ft-lb	1" UNC 423 Nm 312 ft-lb	1" UNC 528 Nm 390 ft-lb	1 1/8" UNC 771 Nm 569 ft-lb
2 1/2"	Stainless Steel RTJ	ASTM A193 B7 ASTM A194 2H (lubricated $\mu = 0.12$ )	5/8" UNC 101 Nm 75 ft-lb	3/4" UNC 177 Nm 131 ft-lb	3/4" UNC 177 Nm 131 ft-lb	1" UNC 423 Nm 312 ft-lb	1" UNC 475 Nm 351 ft-lb	1 1/8" UNC 848 Nm 626 ft-lb
3"	Glass fibre + NBR binder	ASTM A193 B8 Cl.1 ASTM A194 Grade 8	5/8" UNC 76 Nm 57 ft-lb	3/4" UNC 135 Nm 100 ft-lb	-	-	-	-
3"	Reinforced graphite laminate. PSM	ASTM A193 B8 Cl.2 ASTM A194 Gr. 8	5/8" UNC 101 Nm 75 ft-lb	3/4" UNC 177 Nm 131 ft-lb	3/4" UNC 200 Nm 148 ft-lb	-	-	-
3"	Spiral wound 316/graphite SWJ	ASTM A193 B7 ASTM A194 2H (lubricated $\mu = 0.12$ )	5/8" UNC 126 Nm 93 ft-lb	3/4" UNC 177 Nm 131 ft-lb	3/4" UNC 200 Nm 148 ft-lb	7/8" UNC 355 Nm 262 ft-lb	1 1/8" UNC 771 Nm 569 ft-lb	1 1/4" UNC 1186 Nm 875 ft-lb
3"	Stainless Steel RTJ	ASTM A193 B7 ASTM A194 2H (lubricated $\mu = 0.12$ )	5/8" UNC 101 Nm 75 ft-lb	3/4" UNC 177 Nm 131 ft-lb	3/4" UNC 200 Nm 148 ft-lb	7/8" UNC 319 Nm 235 ft-lb	1 1/8" UNC 771 Nm 569 ft-lb	1 1/4" UNC 1078 Nm 796 ft-lb

### Bolting:

Bolt Specification and Grade	Nut Specification and Grade	Type Table 1B ASME B16.5	Remarks	Tensile p.s.i	Yield p.s.i.	Torque Values (above Table)
ASTM A193 B7	ASTM A194 Gr. 2H	High Strength	Quenched & Tempered up to 2 1/2"	125,000	105,000	As per ASTM A193 B7
ASTM A193 B7M	ASTM A194 Gr.2HM	Intermediate Strength		100,000	80,000	As per ASTM A193 B7
ASTM A320 L7	ASTM A194 Gr.4	High Strength	Low Temperature Service	125,000	105,000	As per ASTM A193 B7
ASTM A320 L43	ASTM A194 Gr.4/7	High Strength	Low Temperature Service	125,000	105,000	As per ASTM A193 B7
ASTM A193 B8 Cl.2	ASTM A194 Gr. 8	Intermediate Strength	Up to 3/4"	125,000	100,000	
ASTM A193 B8 Cl.2	ASTM A194 Gr. 8	Intermediate Strength	7/8" up to 1"	125,000	80,000	
ASTM A193 B8 Cl.2	ASTM A194 Gr. 8	Intermediate Strength	1 1/8" up to 1 1/4"	105,000	65,000	
ASTM A193 B8M Cl.2	ASTM A194 Gr. 8M	Intermediate Strength	Up to 3/4" SS316	110,000	95,000	
ASTM A193 B8 Cl.1	ASTM A194 Gr. 8	Low Strength	Carbide solution treated	75,000	30,000	
ASTM A320 B8M Cl.1	ASTM A194 Gr. 8	Low Strength	SS316			

### Guidance Notes.

- Values are based on lubricated bolts (unless otherwise stated), fitted with corresponding nuts. Values are the minimum torque required to ascertain a seal. Please note that the final torque required to seal the gasket joint may vary greatly due to the effects of temperature, corrosion, level of lubrication and thread finish (higher torque values would be applied for non-lubricated bolting). When significant external mechanical or thermal loads are imposed on the flange joint, additional evaluation by an engineer may be required. Applied torque should not exceed 90% of the minimum ASME B31.3 specified Yield Strength.
- The use of lubricants with a lower coefficient of friction lower than 0.11 can lead to excessive stress applied by wrenches or torque wrenches, and yielding or failure of flanges or bolting may result.
- When significant external mechanical or thermal loads are imposed on the flange joint, additional evaluation by an engineer may be required. Applied torque should not exceed 90% of the minimum ASME B31.3 specified Yield Strength.
- For alternative flanging, bolting and gasket configurations, consult TC Fluid Control for advice.
- Bolts should be progressively tightened in a star pattern to ensure even gasket loading. Load should be applied in three stages, representing 30%, 60%, and 100% of the target torque values.

Flange Details	Bolting sequence- bolts numbered clockwise around the flange
4 Bolt Flange	1, 3, 2, 4.
8 bolt flange	1, 5, 3, 7, 2, 6, 4, 8.
12 Bolt flange	1, 7, 4, 10, 2, 8, 5, 11, 3, 9, 6, 12.

- Following the first torque pass confirm that the flanges are parallel.
- The information given in the above table should only be used as a guideline and are not mandatory.
- The above table is based on ASME B16.5 flanges with designated sized bolts.

9. Torque tolerances:  $\pm 2$  ft-lb if torque value is less than or equal to 50 ft-lb  
 $\pm 4$  ft-lb if torque value is less than or equal to 100 ft-lb.  
 $\pm 4$  % if torque value is greater than 100 ft-lb.
10. Ensure all bolting is tightened to the required torque prior to bringing into service. It is recommended to re-tighten bolt/studs to the correct torque value after 24 hours in service when permissible.
11. Maximum and minimum service temperatures of the flange configuration are restricted by the materials selected (bolting and flanges).



#### 10: Functional Testing of the Gauge.

Before bringing the LevelSure gauge into service, it is advisable to carry out a functional test especially when switches and/or transmitter are fitted.

1. Ensure that the gauge system is isolated from the vessel.
2. Wire in any switches and/or transmitter as required following the correct electrical procedures.
3. The level within the gauge can be imitated by pouring water or a suitable media into the chamber via the top vent.
4. Make appropriate checks covering the performance of any ancillaries and indicator operation.
5. Open the drain/drain valve and allow the water/suitable media to run out, thus simulating a falling level.
6. Check ancillaries and the indicator unit accordingly.
7. Close vent and drain.
8. Check the separate I.O.M. of the integral level transmitter for testing procedure.



#### 11: Bringing into service.

Prior to bringing into service / commissioning, all bolting, plugs, ancillary components, thread seals are checked for tightness. If there are no isolation valves fitted between the level gauge and vessel, then the gauge will automatically be brought into service along with the vessel.

When isolation valves are fitted, the procedure is as follows;

1. Allow time for the gauge to reach the operating temperature.
2. Ensure vent and drain connections are shut off.
3. **Slowly** open the isolation valve fitted to the **upper** vessel connection.
4. **Slowly** open the isolation valve fitted to the **lower** vessel connection. This will allow the liquid level to rise in the gauge chamber thereby rotating the wafers to indicate red.  
The actual liquid level is shown by the red/white wafer interface.
5. Check the separate I.O.M. of the integral level transmitter for service procedure



#### 12: Maintenance.

1. No maintenance is required other than periodic inspection to ensure that the gauge is free from foreign particles, sediment or scale etc. Freedom of the float movement may be checked by momentarily opening the drain valve if fitted, (depending upon the process, the isolation valve may have to be closed. Follow the procedure 11: Bringing into service). A drop in the indicated level will demonstrate that the float is free.
2. A damaged or punctured float will sink and this would be indicated by the bottom three wafers changing colour (when warning panel fitted). In this event the float must be replaced.
3. Check the separate I.O.M. of the integral level transmitter for maintenance procedure



#### 13: Removal of the gauge.

1. Isolate the gauge from the source of pressure/media by closing the appropriate isolation valves.
2. Relieve the gauge of any internal pressure and fluid contents by opening the drain valve. Ensure all safety precautions are in place for safe disposal of the contents. Time must be allowed for the gauge and contents to cool prior to this operation.
3. **Warning:** The pressurised level gauge may contain potential hazardous fluids. Wear appropriate protective clothing.
4. When the gauge has cooled, isolate and remove any ancillary equipment.
5. Dismantle respective vessel connections and remove the gauge.
6. If the gauge chamber is to be returned to TC Fluid Control, it is the responsibility of the user to ensure that the chamber is clean and safe to handle without any special precautions. TC Fluid Control must be contacted prior to the return of the chamber and any associated ancillaries (where applicable). TC Fluid Control reserves the right to charge the user for safe disposal if these precautions are not adhered to.



#### 14: Removal of the float.

1. Isolate the gauge from the source of pressure/media by closing the appropriate isolation valves.
2. Relieve the gauge of any internal pressure and fluid contents by opening the drain valve. Ensure all safety precautions are in place for safe disposal of the contents. Time must be allowed for the gauge and contents to cool prior to this operation.
3. When the gauge has cooled, remove the bottom flange.
4. Remove the float.

Warning: When removing the float in a hazardous environment, ensure the float does not drop out of the gauge onto any hard surface. Take appropriate measures to reduce the risk of sparks caused by impacts especially in a potentially explosive atmosphere.



#### 15: Service Life.

Service life depends upon the combination of pressure/temperature and the media. A majority of the gauges are constructed from stainless steel and should give a long service life due to concept of passive protection. The effects of chemical agents, corrosion and vibration are covered by the requirements of the PED 97/23/EC. Alternative materials can be supplied for certain arduous conditions. Check condition of the float and spring damper system (if fitted) periodically. Generally, service life for the gauge is 5 years unless otherwise specified. It is recommended that the gauge system should be inspected on an annual basis. Inspect for corrosion and wear both internally and externally.

Check the relevant I.O.M. covering ancillaries fitted for service life.

#### 16: High / Low temperature Service.

For gauge operating above 130°C or below 0°C, insulation is fitted between the indicator unit and the gauge body. The level of insulation is dependent upon the temperature. This must be re-fitted whenever the indicator display is removed and replaced.



##### 16.1 Insulation Jackets.

Insulation jackets have a service temperature range from -60°C to +250°C and are fabricated to suit a particular magnetic level gauge configuration. The construction of the jacket will have a reduced thickness panel in which the indicator display unit is located. When re-fitting an insulation jacket onto the magnetic level gauge, ensure that the indicator display unit is located back in its correct position otherwise there could be a risk of 'Loss of Display'.



#### 17: Spares.

All replacement components must be genuine TC Fluid Control spares. When ordering, the TC Fluid Control job / order number including the tag number should be quoted. This information can be found on the nameplate, which is normally fitted onto the bottom flange.

#### 18: Gauge subjected to ATEX requirements 94/9/EC


The LevelSure gauge can be covered by EN 13463-1 for the use of non-electrical equipment for potentially explosive atmospheres as defined by EC directive 94/9/EC, (Protection concept 'c' Constructional Safety). The gauge can be manufactured to be suitable for all ATEX categories, refer to sections 20, 21, 26 & 28 regarding conditions for safe use. Any instrument fitted into the LevelSure chamber must meet hazardous area requirements and approved accordingly.

#### 19: ATEX (mechanical) Certification

Category 1      SIRA 04ATEX6126  
 Category 1/2    SIRA 04ATEX6126  
 Category 2      SIRA 04ATEX133  
 Category 3      TCFC assessment



ITEM	DESCRIPTION
1	GAUGE BODY
10	FLOAT
11	INDICATOR
25	SPRING ASSEMBLY, TOP & BOTTOM
17	PED LABEL
15	NON FROST BLOCK
16	S/S CLADDING
30	M6 x 15 mm LONG EARTH STUD
31	ATEX LABEL

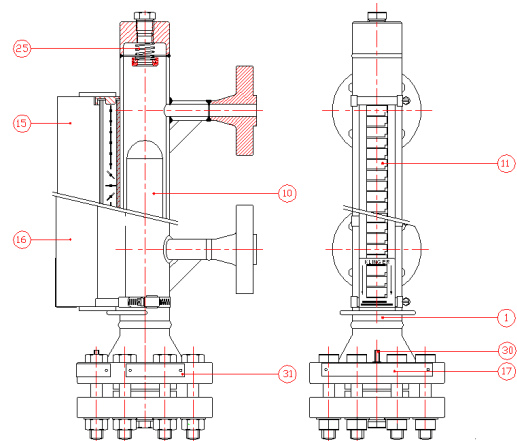





## 20: Temperature class

### Relationship between 'T' rating Temperature class, Ambient and Process Temperatures for Non-Electrical Equipment.

Level Gauge chamber only - Check the separate I.O.M. of the integral level transmitter for temperature limitations.

Temperature Class	Process Temperature	Ambient Temperature
T1	≤ 450°C	-50 °C...+80 °C
T2	≤ 300°C	
T3	≤ 200°C	
T4	≤ 135°C	
T5	≤ 100°C	
T6	≤ 85°C	-50 °C...+60 °C

The operating conditions are for the level gauge chamber only and must not exceed the maximum process temperature shown in the above table for a given 'T' rating. Also refer to any ancillaries fitting and their respective IOM covering limitations of use.



## 21: ATEX APPLICATIONS, Conditions for safe use:

1. When Non frost blocks are fitted in ATEX category 1 & 2 applications, the gauge and the non frost block must be earth bonded.
2. For ATEX categories 1 & 2, when titanium floats are fitted, damper springs / buffer bars must be fixed top & bottom in the gauge.
3. Clean non-frost block vision panel only with a damp cloth.
4. Limit the maximum float velocity under surging conditions to 1 m/s by fixture the appropriate flow restrictions.
5. For any surging conditions (stainless steel or titanium floats), spring buffer system must be fitted to category 1, 2 and 3 applications.
6. Check periodically the condition of the float and spring assembly. Follow procedures as stated for the removal of the float.
7. Refer to Section 28 covering the maximum process temperature for ATEX categories 1, 2 and 3 applications when fitted with a PTFE/Graphite spring damping system. Buffer bar are limited to ATEX category 2 and 3 applications only.
8. For process media's which are subjected to gassing off or surging due to temperature changes, it is recommended to fit insulation around the gauge body.
9. No tools that may cause a spark to be used in a potentially explosive atmosphere unless covered by a 'Permit to Work' system / risk assessment.
10. For electrical equipment such as transmitters or switches, refer to the respective IOM.
11. Use stainless steel clad display indicator units for ATEX category I applications.
12. For gauges fitted with a steam heating jacket, ensure that the maximum steam temperature is less than the process 'T' rated temperature.
13. Titanium floats must be carbon coated (PCVD) for hydrogen gas service.

## 22: ATEX applications. Ancillaries


Where there is a risk that has been identified, all isolated metallic parts must be earth bonded. Refer to section 23.



### 22.1: Valves:

A 'simple' valve is defined as a valve where the only source of ignition is due to the static charge build up created by the flow of media through the valve and does not require any special earth bonding techniques. When such a valve is deemed outside the scope of the directive and is fitted onto the gauge, the user should still carry out an ignition risk assessment to ensure that no source of ignition will become active during operation.

1. General valves, cocks and ATEX compliant ball valves (manually operated) can be fitted on the gauge for category 1 & 2 applications.
2. The selection of the material used in the construction of the valve must be suitable / resistant for the media and operating conditions.
3. Flanged valves must be earth bonded for ATEX Category 1 & 2 applications or when appropriate.
4. Any valve fitted must be pressure/temperature rated accordingly.
5. Valves to be sealed with the appropriate rated gasket or sealant as well as compatibility with the media.

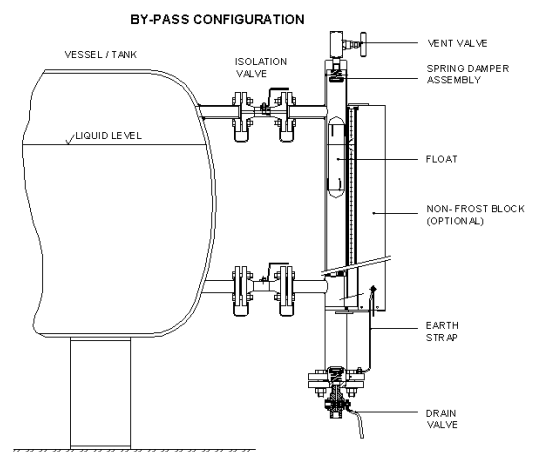

## 22.2 Ancillaries Fitted

Check with the respective IOM for equipment fitted to the LevelSure gauge covering ATEX requirements.



### 23: Earth Bonding

1. It is the user's responsibility to earth bond the level gauge chamber configuration and any ancillaries fitted in a potentially explosive atmosphere.
2. It is the user's responsibility to carry out their own risk assessment or to comply to own site standards. The user must take the necessary steps to ensure all modifications to hazardous area workplaces after 30/06/2003 comply with the appropriate minimum requirements of ATEX 137 (99/92/EC)
3. Recommended minimum earth cable size used = 16 mm<sup>2</sup>.




### 24: Openings:

1. Ensure vent and drain plugs/fittings are sealed during service. Provisions should be made to stop any accidental venting to the atmosphere. Any removal of such devices must be re-installed.



### 25: Cam Lock fittings:

1. Follow the procedure as specified in Section 13.1, 13.2 & 13.3, and allow the magnetic level gauge to cool.
2. Remove the locking device and warning label.
3. Open cam lock device. Ensure that the environment is suitable to carry out the required operation.
4. When closing the cam lock assembly, ensure that the locking device is replaced and attach the warning label.
5. Before returning the gauge to service, follow the procedure as specified in Section 6.
6. Cam lock assembly is locked into position via pins or wired and sealed as showed in the sketch.

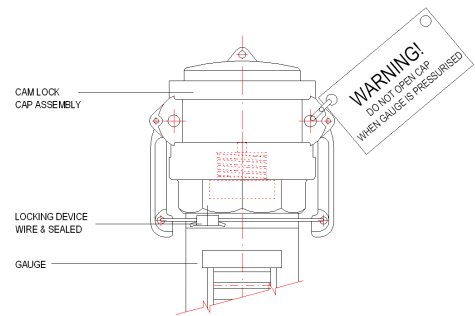

### 26: Coatings – Antistatic coating and paints EN 13463-2:2001

For ATEX applications where either the magnetic level gauge chamber or the indicator display is coated with non-antistatic paint, the following points should be noted. To prevent the build up of an electrostatic charge, one of the following parameters must be met;

Non Anti-static Coatings Gas Group IIC	ATEX Category 1	ATEX Category 2	ATEX Category 3
Compliance	Equipment can not be supplied coated under this scope.	Yes	Yes
Hazardous Area Zone	Zone 0	Zone 1	Zone 2
Equipment Protection Level	EPL Ga	EPL Gb	EPL Gc
Maximum total thickness of coating		Less than 0.2 mm (200 microns)	Less than 0.2 mm (200 microns)
Breakdown voltage across layers		Less than 4kV	Less than 4kV
Surface resistance at 23± 2°C and 50±5% humidity		Less than 1 G ohms	Less than 1 G ohms
Substrate		To be earth bonded	To be earth bonded

#### Notes:

- For static dissipative coatings or paints, there are no limitations on paint thickness. Earth bonding would be recommended.
- For gas groups IIA and IIB, the maximum coating / painted thickness is limited to 2 mm.
- Any coating / paint applied over a metal surface must be earthed using an earth stud.



27:

**TROUBLE SHOOTING GUIDE**

<b>Problem</b>	<b>Possible cause</b>	<b>Action/ rectification procedure</b>
Float fails to raise or fall	Isolation valves closed.	Open slowly as appropriate as per procedure 6.
	Blockage in the connecting pipe-work.	Clean blockage as required
	Float sticking in chamber.	Remove the float as per procedure 14. Check clearance between the bumper wires and the chamber bore. If insufficient clearance, push the bumpers down flat to aid clearance.
		Check that there is no sediment, scale or solidification of the media built up inside the chamber.
	Float damaged.	Check for puncture and ingress of media into float.
Incorrect level is displayed.	Incorrect S.G. float used.	Check that the S.G. range etched on the float matches the corresponding media S.G.
	The S.G. of the float differs to that of the media.	Check that the S.G. range etched on the float matches the corresponding media S.G.
Banks or clusters of wafers are not turning.	The float has been incorrectly installed upside down	Remove the float and replace with the top end uppermost in the chamber.
	The media has surged thus causing the float within the chamber to travel at abnormally high speed thus 'missing' the magnetic field of the wafers.	Reduce surging by fitting orifice plates or throttling the vessel valves accordingly.
Inverse wafer operation.	Damaged float magnet.	Replace with new float. Carry out functional test as per procedure 10.
	Indicator upside down.	Check orientation of indicator. Note that 'top' is stamped on end cap of indicator.
Wafers in the indicator have discoloured.	Maximum temperature on the gauge tag plate has been exceeded.	Heat shield/s is required. If already fitted, then the insulation specification needs to be increased. Replace indicator if required.
	Heat shields have been removed and not replaced	Refit insulation between display and chamber. Replace indicator if required.
Loss of Display	Insufficient magnetic field from the float to activate the wafers in the display unit. Faulty Float. Excessive insulation used.	Check 'Damaged Float Panel' fitted on the indicator display. A larger magnet system may be required, consult TC Fluid Control technical sales. If an insulation jacket is fitted, check that the indicator unit is fitted where the thickness of the jacket is reduced.



28: Data sheet

ATEX 94/9/EC for non electrical equipment

Parameter	Equipment Category 1	Equipment Category 2	Equipment Category 3
<b>Process parameters</b>			
Equipment group	II	II	II
Category	1	2	3
Level of protection	Very High	High	Normal
Zones Gas vapour mist	0	1	2
Process temperature range	Maximum & minimum temperature depends upon material selection. ATEX is limited to -150 °C to 450°C Note: maximum temperature also determined by 'T' rating, materials and any ancillaries fitted.	Maximum & minimum temperature depends upon material selection. ATEX is limited to -150 °C to 450°C Note: maximum temperature also determined by 'T' rating, materials and any ancillaries fitted.	Maximum & minimum temperature depends upon material selection. ATEX is limited to -150 °C to 450°C Note: maximum temperature also determined by 'T' rating, materials and any ancillaries fitted.
<b>ATEX Label details</b>			
Equipment Marking	II 1 G c T1....T6	II 2 G c T1...T6	II 3 G c T1....T6
CE marked	Yes	Yes	Yes
Notified body Number	Baseefa 1180	No	No
ATEX Number	SIRA 0518 SIRA 04ATEX 6126 EC Type Examination	SIRA 04ATEX T133 File Reference	No
<b>Indicator details</b>			
Display unit	Stainless steel clad	Aluminium Optional: Stainless steel clad	Aluminium Optional: Stainless steel clad
Use of standard Non Frost block configuration without s/s side cladding or bonding.	No	No	Yes
Non Frost block fitted with stainless steel side cladding	Yes To be bonded, Minimum 16mm <sup>2</sup> cable.	Yes To be bonded, Minimum 16mm <sup>2</sup> cable.	Optional: Stainless steel cladding & bonding
<b>Floats</b>			
Use of titanium floats	Must be fitted with spring damping	Must be fitted with spring damping	Yes (spring damping optional)
Use of stainless steel floats	Yes	Yes	Yes
Use of plastic floats	No	No	No
Dissipative plastic floats	-	-	-
Spring damping system	Required if surging (float velocity) exceeds 1 m/s. Maximum process temperature PTFE/Carbon 260°C, Graphite cushion 450 °C	Required if surging (float velocity) exceeds 1 m/s. Maximum process temperature PTFE/Carbon 260°C, Graphite cushion 450°C.	Required if surging (float velocity) exceeds 1 m/s. Maximum process temperature PTFE/Carbon 260°C, Graphite cushion 450 °C.
Buffer bars (Alternative to springs when applicable)	No	Maximum process temperature PTFE/Carbon 260°C.	Maximum process temperature PTFE/Carbon 260°C.
<b>Chamber</b>			
Chamber Material	Austenitic stainless steel, super austenitic stainless steel and nickel based alloys. Titanium gauges not permissible.	Austenitic stainless steel, super austenitic stainless steel and nickel based alloys. Titanium Grade 2.	Austenitic stainless steel, super austenitic stainless steel and nickel based alloys. Titanium Grade 2.
Vessel Flange Material	Carbon steel, duplex, austenitic stainless steel, super austenitic stainless steel and nickel based alloys.	Carbon steel, duplex, austenitic stainless steel, super austenitic stainless steel and nickel based alloys.	Carbon steel, duplex, austenitic stainless steel, super austenitic stainless steel and nickel based alloys.
Bottom chamber Flange Material	Carbon steel, duplex flanges, a spring damper must be fitted. Austenitic stainless steel, super austenitic stainless steel and nickel based alloys. Note: If float velocity exceeds 1 m/s a spring damper must be fitted	Carbon steel, duplex, flanges, a spring damper must be fitted. Austenitic stainless steel, super austenitic stainless steel and nickel based alloys. Note: If float velocity exceeds 1 m/s a spring damper must be fitted	Carbon steel, duplex, austenitic stainless steel, super austenitic stainless steel and nickel based alloys flanges. Note: If float velocity exceeds 1 m/s a spring damper must be fitted.
Earth stud/bonding	Required if Non-frost block/s are fitted or coated gauge.	Required if Non-frost block/s are fitted or coated gauge.	Optional for Non Frost Blocks. Required on coated gauges.
<b>Documentation</b>			
Declaration of conformity	Yes EC Type examination Cert.	Yes	Yes
Harmonised Standards	EN 13463-1:2009 EN 13463-5:2003 EN 1127-1	EN 13463-1:2009 EN 13463-5:2003 EN 1127-1	EN 13463-1:2009 EN 13463-5:2003 EN 1127-1
Quality Assurance	Baseefa (2001) Ltd. Notified Body No. 1180		
IOM	Yes	Yes	Yes

## 29: Data Sheet Notes:

- 1 Titanium floats must be carbon coated (PCVD) for hydrogen service.
- 2 For saturated steam service only, the environment within the gauge will be non-hazardous regardless of the zone outside; a non-cushioned spring assembly can be fitted. (The maximum temperature is determined by 'T' rating, the material used and any ancillaries fitted).
- 3 Generally, the process temperature for a stainless steel float is limited to 450°C and for standard range of grade 2 titanium float is restricted to 315°C. Consult the technical sales office for temperatures outside specified range.
- 4 For low temperature applications, the indicator and non frost block assembly must be insulated from the gauge body.

All information and recommendations contained in this publication are to the best of our knowledge correct. Since conditions of use are beyond our control, user must satisfy them that the product is suitable for the intended processes and uses. No warranty is given or implied in respect of information or recommendations or that any use of products will not infringe rights belonging to other parties. In any event or occurrence our liability is limited to our invoice value of the goods delivered by us to you. We reserve the right to change product designs and properties without notice.



**TC FLUID CONTROL**  
**A division of the WIKA group**  
**Unit 4, The Interchange**  
**Wested Lane,**  
**Swanley,**  
**Kent BR8 8TE**

**Tel: +44 (0) 1322 622400**  
**Fax: +44 (0) 1322 660621**  
**Website: [www.tc-fluidcontrol.com](http://www.tc-fluidcontrol.com)**